




## Display

### Display loops

Alternating display in normal operation (**without** due date programmed)

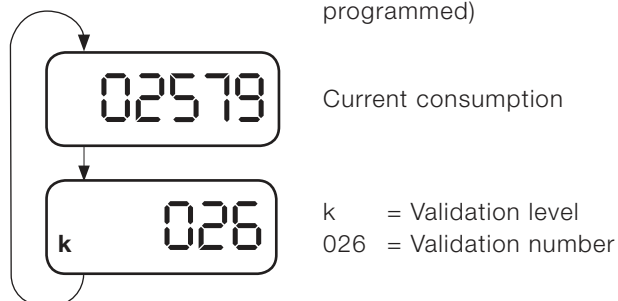

 Alternating display in normal operation (**with** due date programmed)

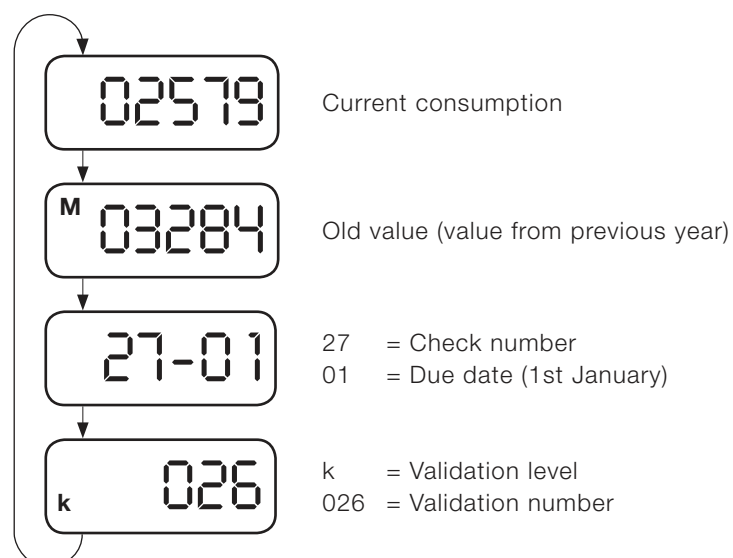

This display only appears if an error has occurred.  
The device does not switch to any other display.

If the HKVE has been exposed to an ambient temperature lower than about 5 °C for a longer period (e.g. during transport in a vehicle in winter), the HKVE can display "Error".

Wait until the device has adapted to room temperature (min. 15 °C).

If the display remains blank or the word Error does not disappear, the HKVE must not be used. It must be returned to the manufacturer for checking!